MCPWTKL
3in1 COMBO

User Guide

EN User manual / ES Manual de usuario / PT Manual do usuário / FR Manuel de l'Utilisateur / IT Manuale d'uso / DE Benutzerhandbuch / PL Instrukcja obsługi / NL Handleiding / دليل الاستخدام

Cet appareil se recycle
À DÉPOSER EN MAGASIN OU À DÉPOSER EN DÉCHÈTERIE
Points de collecte sur www.quefairedemesdechets.fr
Privilégiez la réparation ou le don de votre appareil !

MARSGAMING
Biomag S. L.
EU office:
Address: Barratxi 39, Pab. 3
01013, Vitoria, SPAIN
Telephone: +34945124598
Email: attcliente@biomag.es
Made In China

LI-ION

WWW.MARSGAMING.EU

CONTENT / Contenido / Conteúdo / Contenuto / Contenu / Inhalt / Zawartość / Inhoud / محتوى

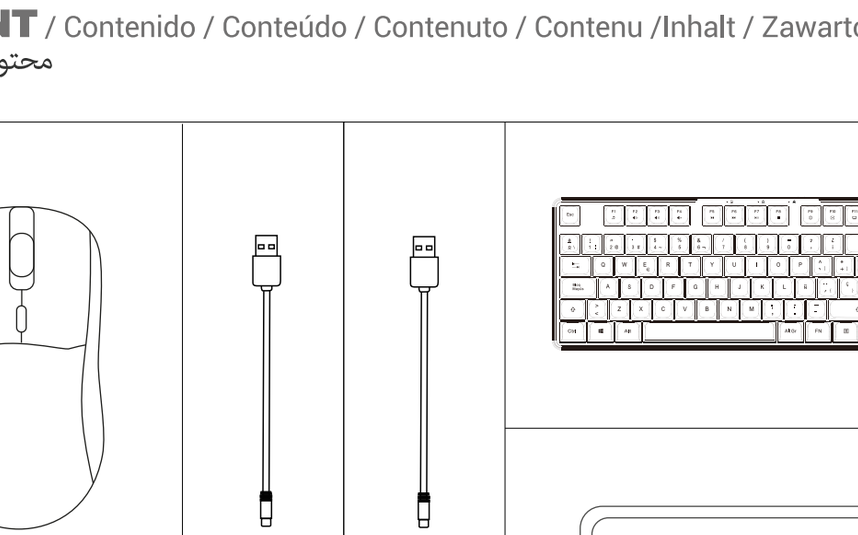

SPECIFICATIONS / Especificaciones / Especificações / Specifiche / Spécifications / Spezifikationen / Specyfikacje / Specificaties / المواصفات

124x64x41mm / 77g
800-1600-3200DPI
500mAh Li-Po 3.7V
DC 5V⎓300mA

359x133x34mm / 412g
1000mAh Li-Po 3.7V
DC 5V⎓300mA

360x260x3mm

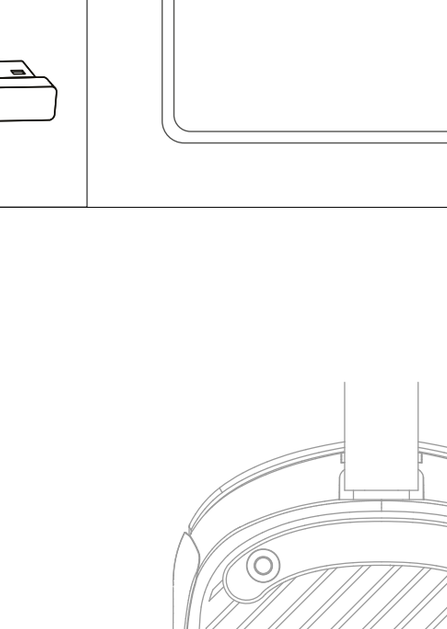

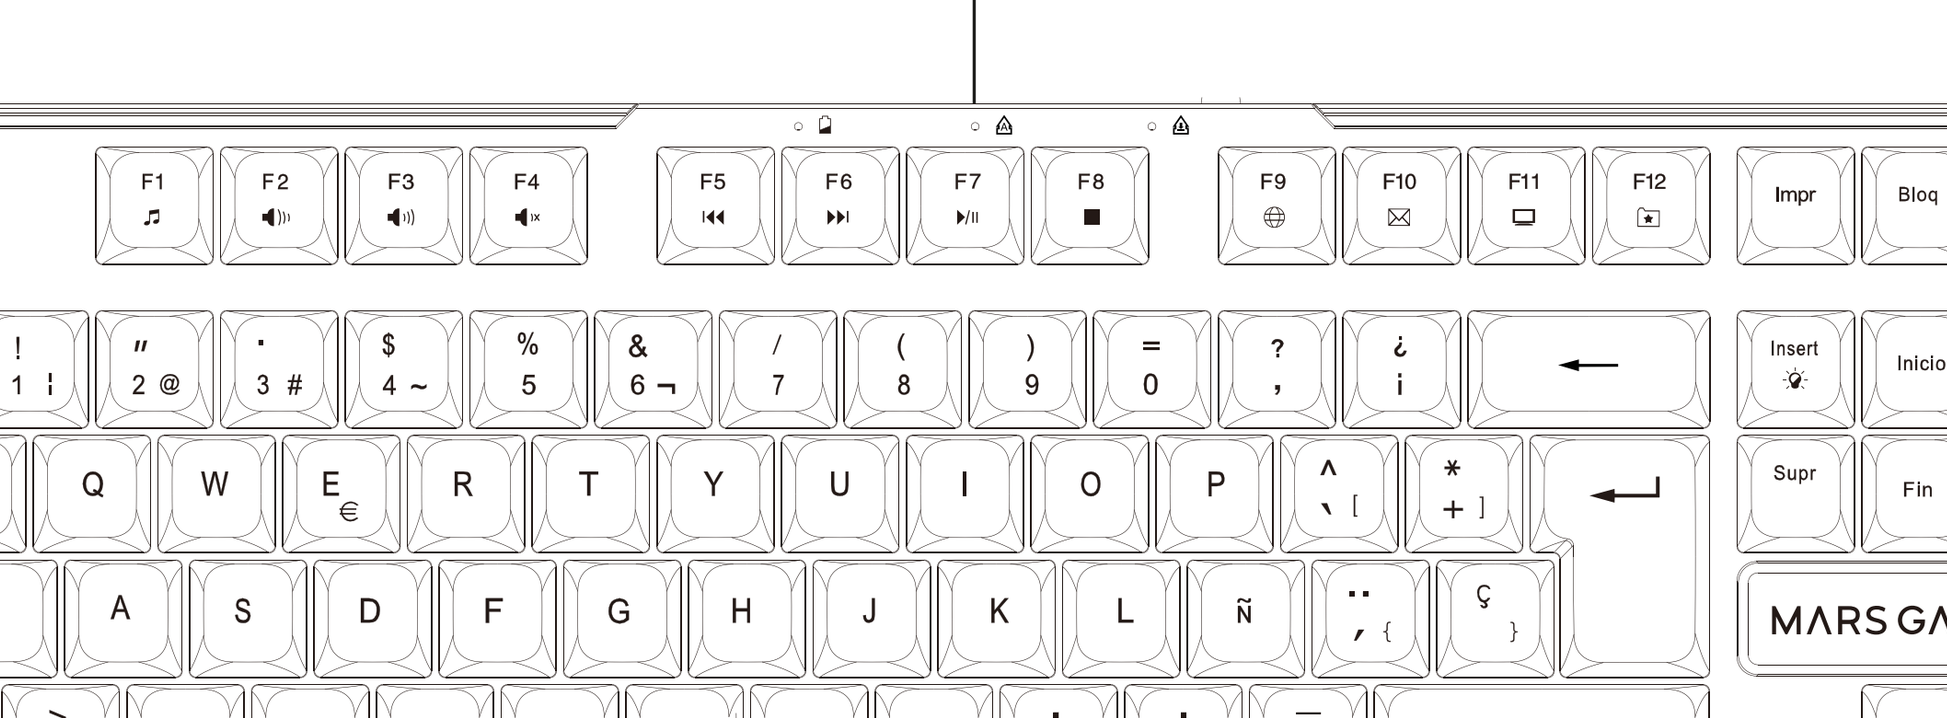

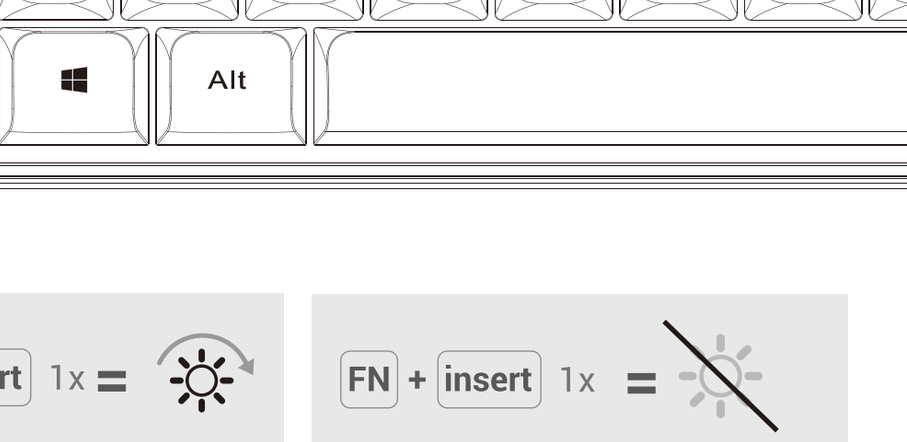

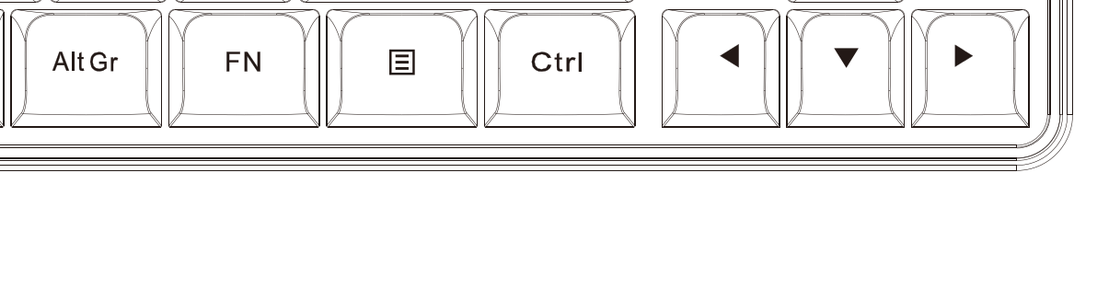

BATTERY / Batería / Bateria / Batteria / Batterie / Batterie / Bateria / Batterij / بطارية

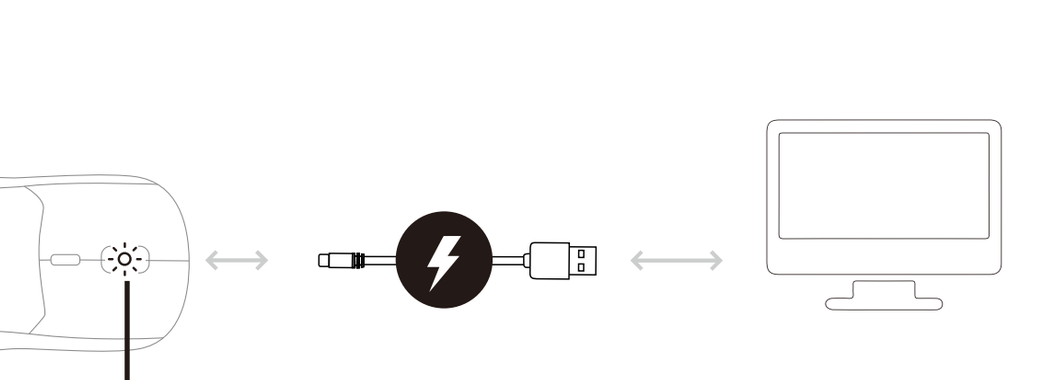

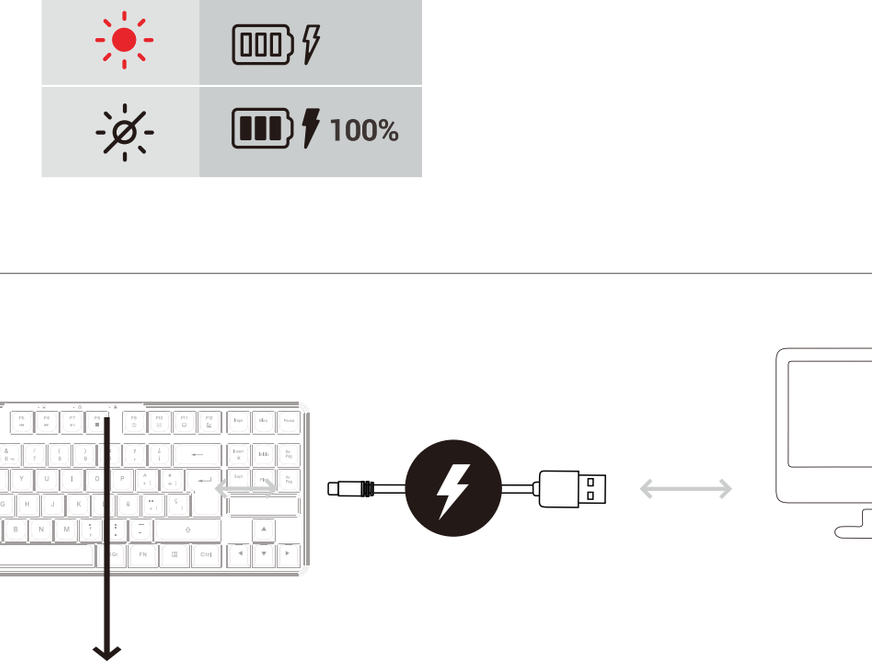

CONNECTION / Conexión / Conexão / Connessione / Connexion / Verbindung / Połączenie / Verbinding / اتصال

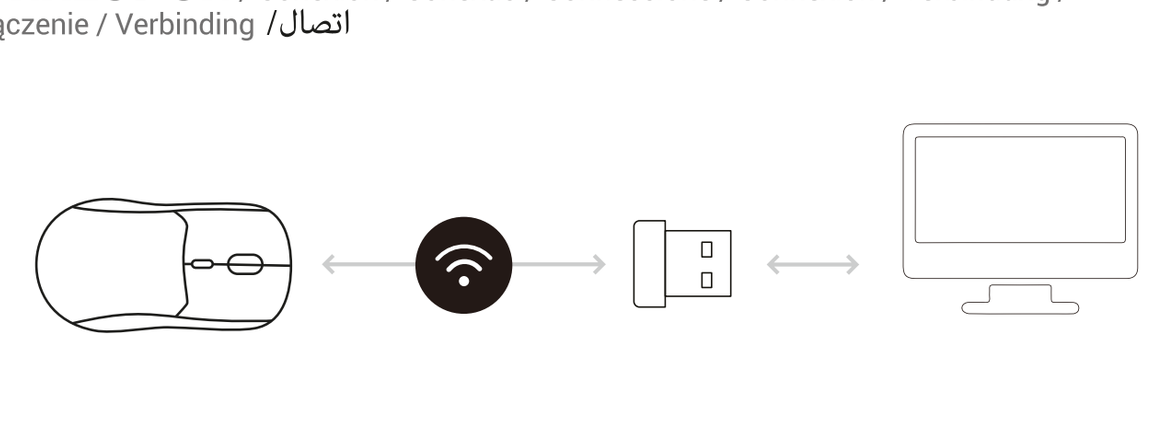

EN

SECURITY REMINDERS

-Avoid direct sunlight, temperature higher than 45ºC, high humidity, or contact with water, and clean the device only with a soft, dry cloth after disconnecting it from charging.
-Insert USB cables gently without bending them to avoid port damage and disconnect the charging cable when not in use.
-Do not use the mouse if it has visible damage, malfunctions, or if the battery is damaged, swollen, or leaking.
-Avoid hitting or puncturing the device and do not attempt to open, disassemble, or repair it yourself except for the battery replacement process described in this manual, to avoid electric shock or damage.
-Do not leave the product charging unattended for long periods and, in case of any irregularity, contact customer service immediately.

BATTERY

-Connect the USB cable to the PC and fully charge the battery before using the mouse and keyboard for the first time. Only use the included USB-A to USB-C cable to charge the device. If a charge adapter is used, make sure the adapter output ratings are 5V and at least 0.5A.
Do not dispose of the device with household waste at the end of its life. Please take it to an authorized collection point in accordance with electronic waste regulations.

TROUBLESHOOTING

- Unsuccessful keyboard connection: 1. Make sure the USB wireless adapter is connected to the device and the keyboard switch is ON 2. Connect the USB wireless adapter to a different USB port of the computer 3. Restart the keyboard and the device 4. If the problem persists, switch ON the keyboard and press ESC key + Q key to start pairing mode and connect the wireless adapter to the computer.
- Mouse or Keyboard will not power ON or is not detected: 1. Fully charge the mouse or keyboard 2. Move the bottom switch to power ON 3. If the problem persists, try connecting the USB charging cable to a different USB port and try a different USB cable.
- Disconnections: 1. Fully charge the mouse or keyboard 2. Check if the device is too far from the mouse or keyboard or if there are many obstacles between device and mouse or keyboard. There might be occasional disconnections or interferences if there are many electromagnetic signals in the environment or if the wireless range has been exceeded.
- Mouse pointer erratic movement: Ensure the surface under the mouse is clean. Use a mousepad to avoid reflective or uneven surfaces.
- Mouse pointer too fast or slow: Increase or decrease the pointer speed by pressing the DPI button. Adjust the mouse pointer speed on your operating system settings.
- Keys not responding: Inspect the keys for any obstructions and clean if necessary. Check the language settings in your operating system to ensurethey match your keyboard layout.
- Keys require excessive force: Clean the keyboard to remove any dirt that may affect the sensitivity of the keys.
-Mousepad stains: Clean the mousepad with water and soap, if there are soap residues rinse the mousepad until they disappear. Rinse it as many times as needed.
- Mousepad deformation: Deformation observed in the mousepad upon unpacking is a common occurrence resulting from the packaging process. To rectify this, the mousepad should be stretched out and subjected to pressure by placing heavy, flat objects, such as books, on top for several hours. This procedure assists in returning the mousepad to its original flat condition. For prevention of future deformations, it is recommended to store the mousepad in a flat position.
-Battery life is too short: Lithium batteries have a limited lifespan and lose capacity over time. If you notice your mouse battery runs out much faster than when it was new, it means it is worn out. You can replace it with a new one by following the steps in the BATTERY REPLACEMENT section.

BATTERY REPLACEMENT

If the battery life decreases significantly, you can replace it:
1.Contact Customer Service to obtain a certified original replacement battery.
2.Strictly follow the steps detailed in the Battery replacement drawings.
3.The battery is held by adhesive. Apply pressure gradually around the edges, taking care not to bend or break it. Do not use metal or sharp tools; there is a risk of fire if the battery is punctured.
4.When disconnecting the battery JST connector, always pull from the plastic connector. Never pull on the wires to avoid damage or short circuits.

Spare Parts Availability: Original batteries will be available for the minimum mandatory period required by EU law after the last unit is placed on the market. Contact Customer Service for replacements.

WARRANTY

The original purchase receipt is required for warranty service. The replacement of the battery by the user, following the instructions in this manual, does not void the device's legal warranty. However, any damage caused to internal components during the replacement process, technical modifications not described here, or damage due to external mechanical forces will not be covered. For full terms, visit es.marsgaming.eu/es/terms

COMPLIANCE

You can consult the European Union Declaration of Conformity of the product at www.marsgaming.eu/en/conformity For more information www.marsgaming.eu

DISPOSAL AND RECYCLING

Do not dispose of with household waste. You must remove the battery before taking the device to an official collection point.

CONTACT

If you have questions or need assistance with the product, do not hesitate to contact us: attcliente@biomag.es / +34945124598

ES

RECORDATORIOS DE SEGURIDAD

-Evite la luz solar directa, temperaturas superiores a 45ºC, humedad elevada o el contacto con el agua, y limpie el dispositivo únicamente con un paño suave y seco después de desconectarlo de la carga.
-Inserte los cables USB suavemente sin doblarlos para evitar daños en el puerto y desconecte el cable de carga cuando no esté en uso.
-No utilice el ratón si tiene daños visibles, fallos de funcionamiento o si la batería está dañada, hinchada o tiene fugas.
-Evite golpear o perforar el dispositivo y no intente abrirlo, desmontarlo o repararlo usted mismo, excepto para el proceso de reemplazo de la batería descrito en este manual, para evitar descargas eléctricas o daños.
-No deje el producto cargando sin vigilancia durante largos períodos y, en caso de cualquier irregularidad, póngase en contacto con el servicio de atención al cliente de inmediato.

BATTERY REPLACEMENT

Reemplazo de batería/ Substituição de bateria / Sostituzione della batteria / Remplacement de la batterie / Batteriewechsel / Batterij vervangen / Wymiana baterii / استبدال البطارية

1.Contact us to get the replacement battery / Contáctanos para obtener la batería de repuesto / Contate-nos para obter a bateria de reposição / Contattaci per ottenere la batteria di ricambio / Contactez-nous pour obtenir la batterie de rechange / Kontaktieren Sie uns für den Ersatzakku / Neem contact met ons op voor de vervangende batterij / Skontaktuj się z nami, aby uzyskać baterię zamienną / اتصل بنا للحصول على البطارية البديلة

attcliente@biomag.es

2. Power OFF the device / Apagar el dispositivo / Desligar o dispositivo / Spegnere il dispositivo / Éteindre l'appareil / Gerät ausschalten / Apparaat uitschakelen / Wyłącz urządzenie / إيقاف تشغيل الجهاز

3. Peel off the sticker and unscrew the casing / Despegar la pegatina y desatornillar la carcasa / Descolar o adesivo e desaparafusar a carcaça / Rimuovere l'adesivo e svitare la scocca / Décoller l'autocollant et dévisser le boîtier / Den Aufkleber abziehen und das Gehäuse abschrauben / De sticker verwijderen en de behuizing losschroeven / Odkleić naklejkę i odkręcić obudowę / إزالة الملصق وفك الغلاف

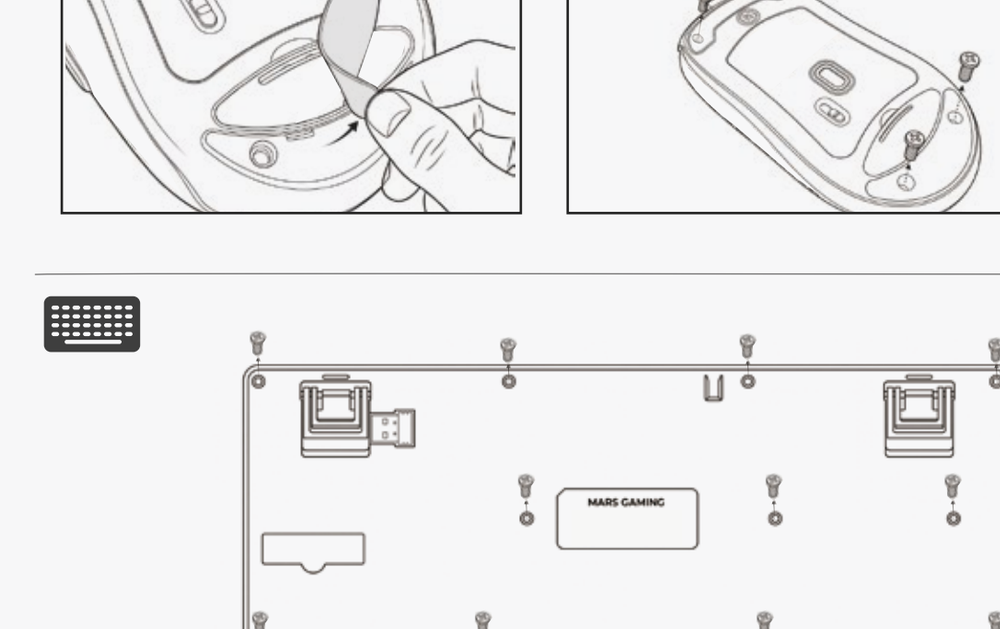

4. Remove the top casing / Extrae la carcasa superior / Remova a carcaça superior / Rimuovi la scocca superiore / Retirez le boîtier supérieur / Entfernen Sie das obere Gehäuse / Verwijder de bovenste behuizing / Zdejmij górną obudowę / قم بإزالة الغلاف العلوي

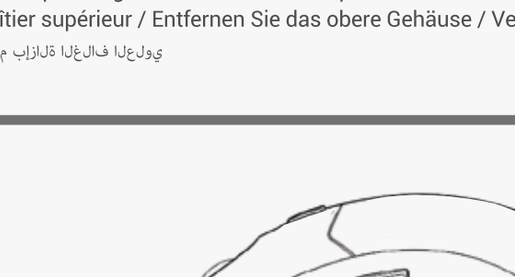



5. Apply force to the ends of the battery until it detaches / Ejercer fuerza en los extremos de la batería hasta despegarla / Exerça força nas extremidades da bateria até descolá-la / Esercitare forza sulle estremità della batteria fino a scollarla / Exercez une force sur les extrémités de la batterie jusqu'à ce qu'elle se décolle / Üben Sie Kraft auf die Enden der Batterie aus, bis sie sich löst / Oefen kracht uit op de uiteinden van de batterij totdat deze loslaat / Wywieraj nacisk na końce baterii, aż się odklei / مارس قوة على أطراف البطارية حتى تنفصل

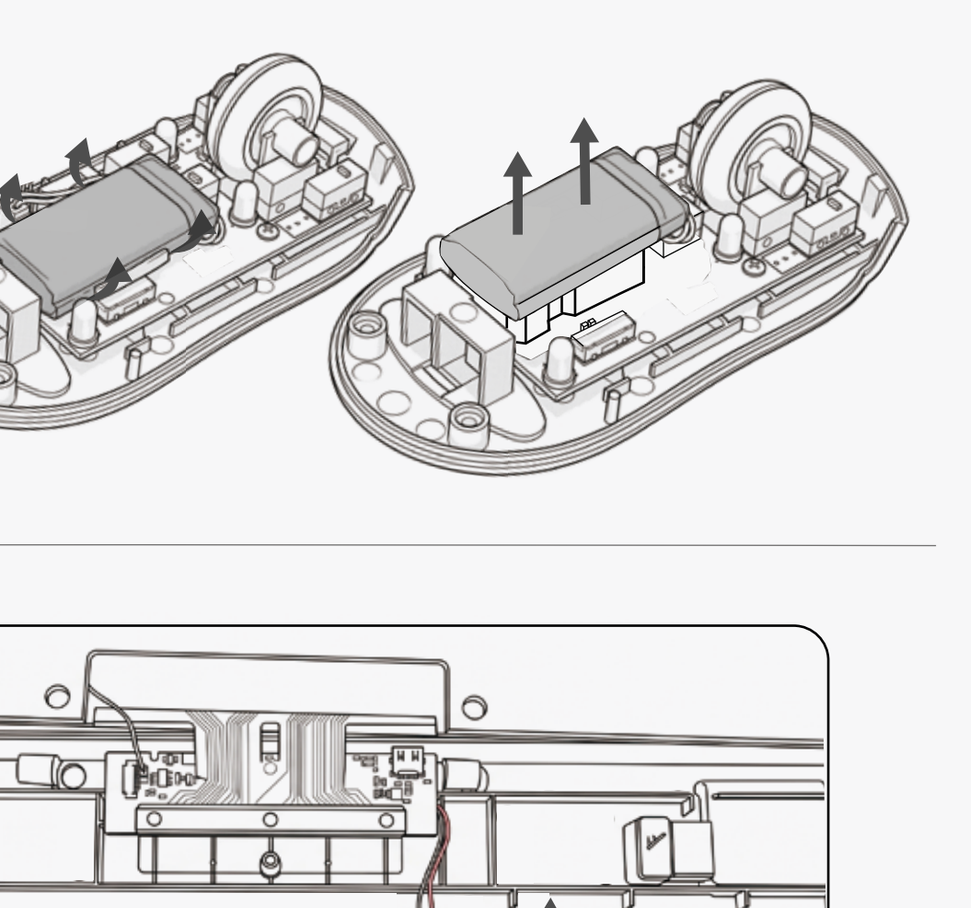

6. Disconnect the battery / Desconectar la batería / Desconectar a bateria / Scollegare la batteria / Débrancher la batterie / Batterie trennen / De batterij loskoppelen / Odłączyć baterię / فصل البطارية

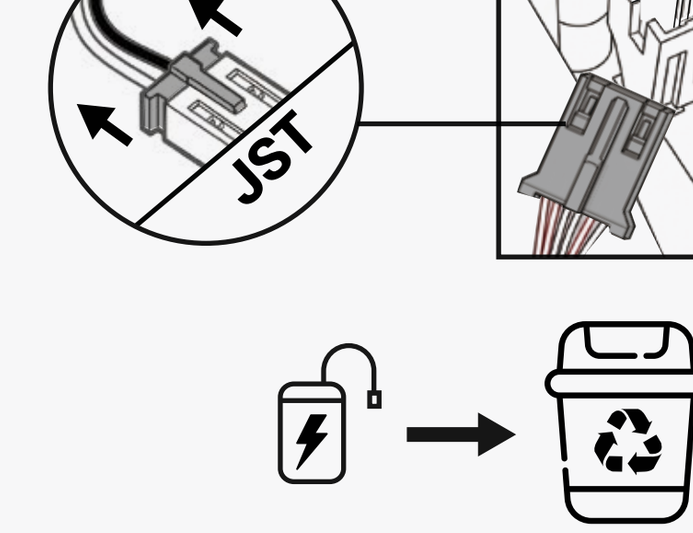

7. Connect the replacement battery / Conecta la batería de repuesto / Conecte a bateria de reposição / Collega la batteria di ricambio / Connectez la batterie de rechange / Schließen Sie den Ersatzakku an / Sluit de vervangende batterij aan / Podłącz baterię zamienną / قم بتوصيل البطارية البديلة

8. Secure the battery ... / Fixez la batterie à l'i... / ...teria all'interno / ... binnenkant / Zamocuj baterię wew...

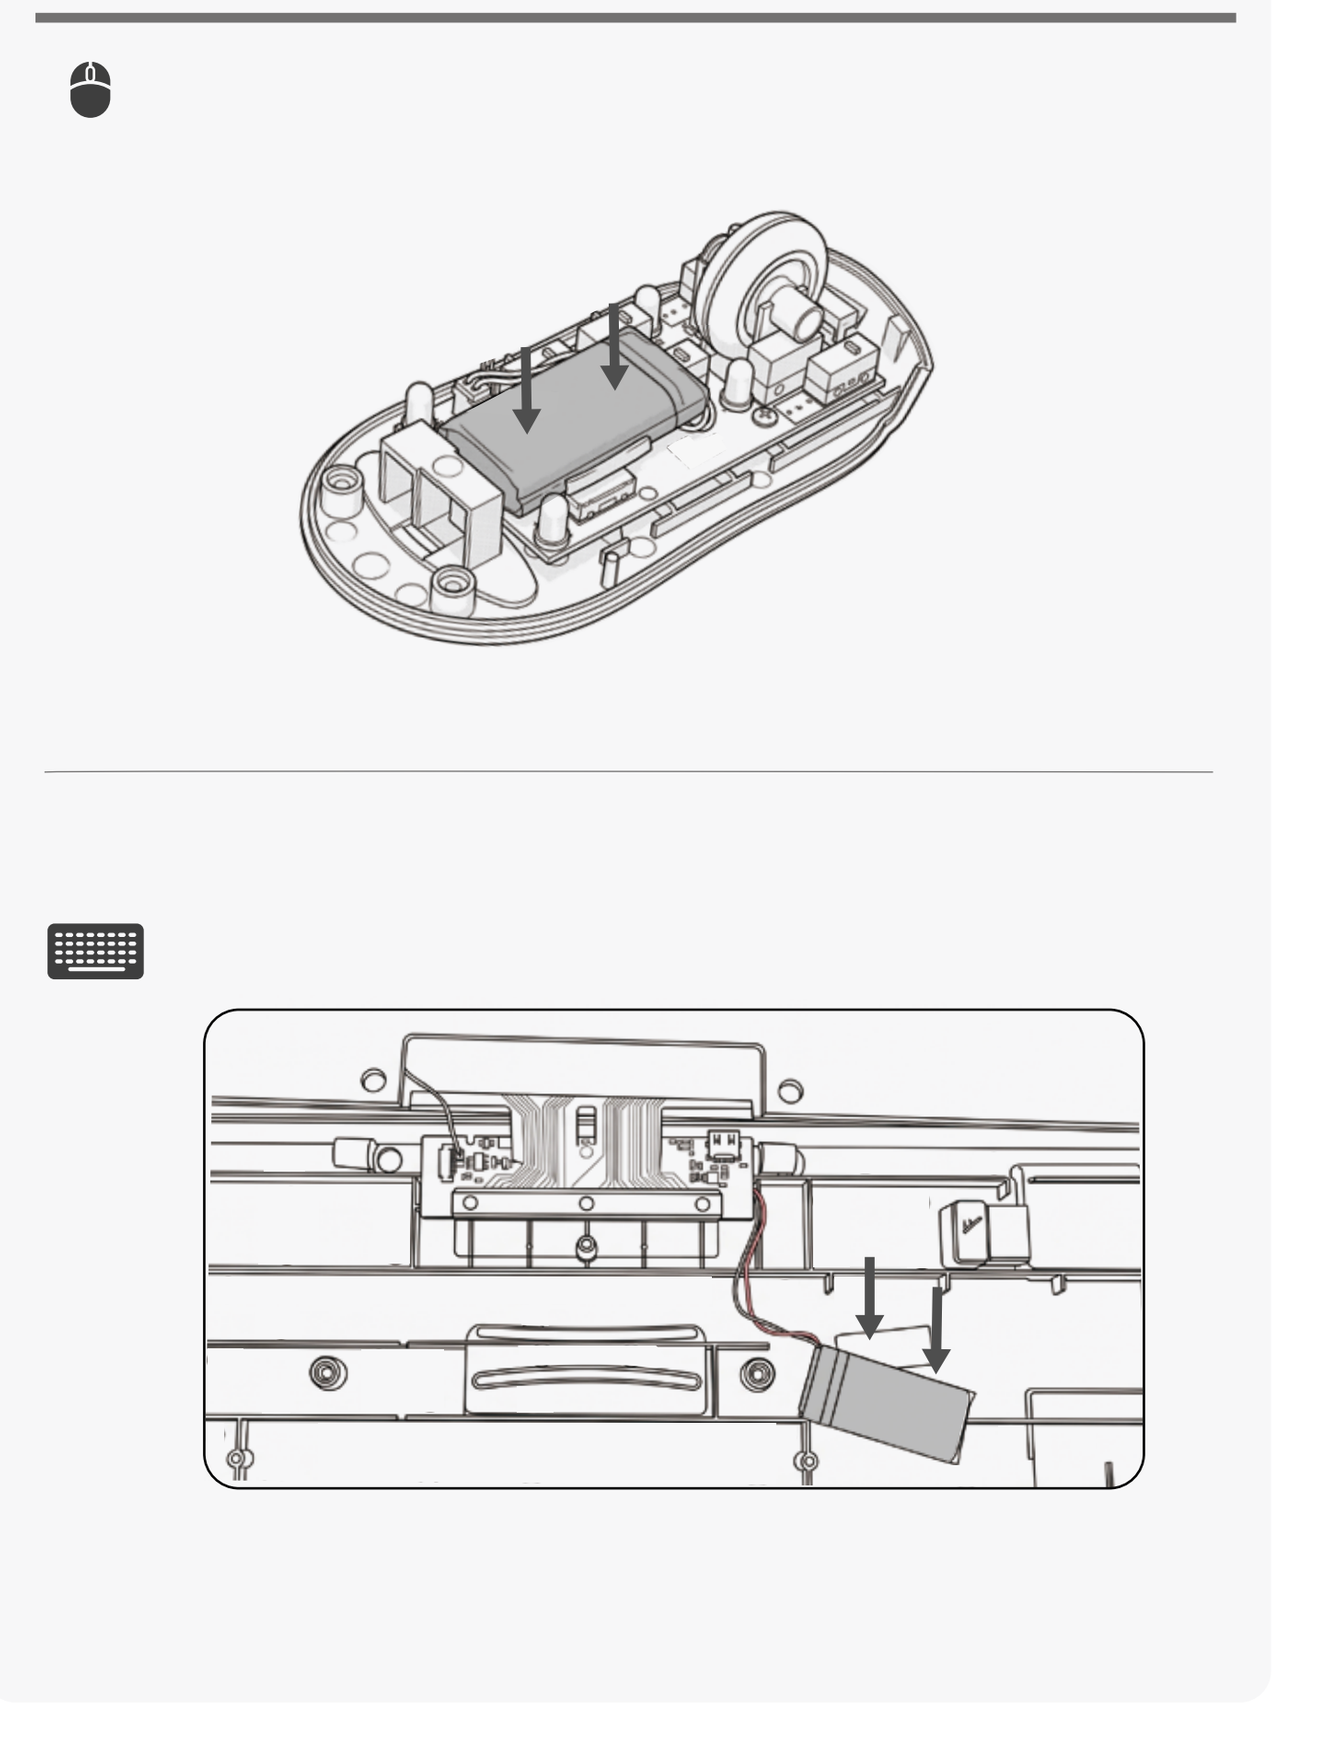

WWW.MARSGAMING.EU

Cet appareil, ses accessoires et ses cordons sont recyclent
À DÉPOSER EN MAGASIN OU À DÉPOSER EN DÉCHÈTERIE
Points de collecte sur www.quefairedemesdechets.fr
Privilégiez la réparation ou le don de votre appareil !

MARSGAMING
Biomag S. L.
EU office:
Address: Barratxi 39, Pab. 3
01013, Vitoria, SPAIN
Telephone: +34945124598
Email: attcliente@biomag.es